N S R U С 0 S Activate the Dry-Brik[®] by removing the foil cover. Do not remove the foil cover until you are ready to use the Dry-Brik. Once the foil cover is removed, the Dry-Brik will begin adsorbing moisture.



DRY-RRIK II

DISCARD ATTER 2 MONTHS

Write the date that this Dry-Brik is placed in service.

Replace the Dry-Brik after 2 months. Dispose of the old one

in household refuse.



