



HomeAware Remote Phone Transmitter Quick Set-Up Guide Item# HA360VPT

The HomeAware Remote Phone Transmitter (item# HA360VPT) is designed to expand the scope of the HomeAware Main Unit, alerting individuals of an incoming telephone call from a phone located in a different room, video relay service or fax. It will be necessary to link your Basic Receiver to your HomeAware Main Unit.

To link the remote phone transmitter to HomeAware Main Unit, follow steps below:

1. Remove pull tab located at the bottom of the HA360VPT to activate batteries
2. Carefully remove the latch to expose the bottom compartment of the HA360VT.
 - a. NOTE: if the batteries fall out, install them into the compartment with both "+" sides of the battery facing the black LINK button. When batteries are installed properly, the red light on the front of the HA360VPT should illuminate *when the black link button is pushed*. If the light does not light up, the batteries may be backwards of the
3. Press SET UP button on the Main Unit. The word LINK will show on the display where the time of day is usually appears. Press ENTER. The word LINK will begin to flash.



4. Press and hold down the link button on the bottom of the HA360VPT. The red light on the transmitter will light up. Release the button and the words PICK A DEVICE will begin to scroll on the display of the main



- unit. PHONE will then appear on the display; press ENTER if you want to be alerted to an incoming phone call OR press the up (TONE) button to switch to VRS or FAX. When desired device is shown, press ENTER
5. The HomeAware Main Unit will briefly show DONE, and return to the time display. Your transmitter is now connected.