PURELL® ES1 Dispenser Installation Instructions







Wall-Mount Instructions



Clean surface with isopropyl alcohol. **Do not use household cleaners**

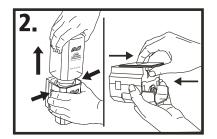


Remove refill by depressing right and left release buttons. Remove mount plate by depressing release lever behind push bar and sliding mount plate. Set refill and base aside

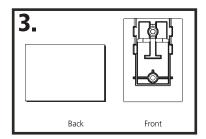


Remove the protective paper from the double-sided tape and press firmly on the mount plate



Slide Mounting Plate onto base

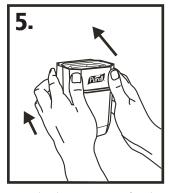


Remove the other protective paper from the double-sided tape and place base on surface

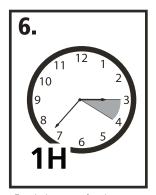

Allow the base to set for 1 hour



Slide refill into base until refill locks in place

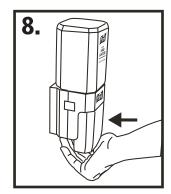

Depress push bar several times until product is dispensed




Dispenser Adapter and Conversion InstructionsVideo instructions available at www.gojo.com/ES1 or scan QRC Code







Push right and left release buttons simultaneously. Remove OLD refill



Insert adapter into dispensing base. You will feel a click when it is correctly in place



Remove cap on NEW refill




Slide refill into dispensing base. Refill will lock into place



Surface-Mount Instructions



Clean surface before adhering mount solution to the horizontal

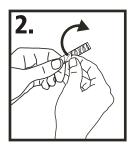

Peel the paper from red Command side of the first strip




One at a time, adhere the Command strips to the bottom of the surface mount, leaving the entire rounded and non-adhesive edge extending beyond the edge of the metal mount. This will allow for easy removal if necessary. Repeat this 2 times for the remaining Command strips




Peel the protective paper from the wall side of each command strip



Place the mount against the surface in the desired location and firmly press

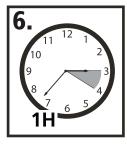

Allow the command strips to set for 1 hour before loading base and refill

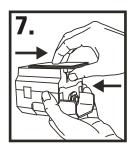

Press the release lever located on the bottom of the base; slide off the wall plate



Slide base onto the surface mount, making sure there is an audible click when the base is in place



Load refill into the base with the PURELL label facing out making sure there is an audible click when the refill is in place



Pump the push bar on the base until fully primed and PURELL Advanced Instant Hand Sanitizer is dispensed



Rail-Mount Instructions



Clean surface before adhering mount solution to the horizontal surface




Peel the protective paper off of the double sided tape




Adhere to the inside of the vertical face of the rail mount




Peel the protective paper from the other side of double sided tape

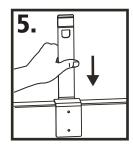

Place the mount against the surface in the desired location and firmly press

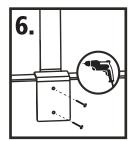

Use the provided self-tapping screws and a drill to secure rail mount into the vertical surface

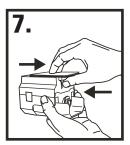

Press the release lever located in the bottom of the base and slide off the wall plate



Slide base onto the rail mount, making sure there is an audible click when the base is in place



Load refill into the base with the PURELL label facing out, making sure there is an audible click when the refill is in place



Pump the push bar on the base until fully primed and PURELL Advanced Instant Hand Sanitizer is dispensed



GOJO Industries, Inc.
One GOJO Plaza, Suite 500
P.O. Box 991 • Akron, OH 44309-0991
Tel: 1-330-255-6000 • Toll-free: 1-800-321-9647
Fax: 1-800-FAX-GOJO