

Plantronics BT600

Quick Start Guide


Contents

Pair	3
Configure	4
Support	5


Pair

To pair your high-fidelity Bluetooth® USB adapter to your headset, do the following:

- 1 Insert the USB adapter into your laptop or computer and wait for your computer to recognize it.

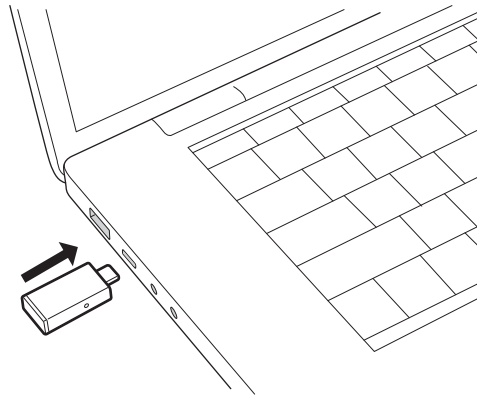

- 2 Put your headset in pair mode (refer to your headset's user guide).
- 3 Put your USB adapter into pair mode by pressing and holding the red Pair button until the USB adapter LED flashes red and blue.

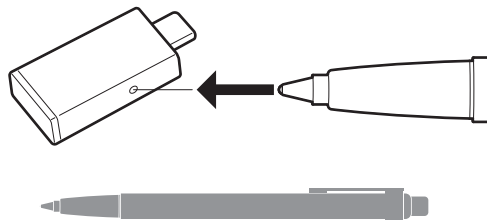

Pairing is successful when you hear "pairing successful" and the USB adapter LED is solid blue.

Configure

Your USB adapter comes ready to take calls. If you want to listen to music, you need to configure your USB adapter.

Windows

- 1 To configure your USB adapter to play music, go to Start menu > Control Panel > Sound > Playback tab. Select **Plantronics BT600**, set it as the Default Device and click OK.
- 2 To pause music when you place or receive calls, go to Start menu > Control Panel > Sound > Communications tab and select the desired parameter.

Mac

- 1 To configure the USB adapter, go to Apple menu > System Preferences > Sound. On both the Input and Output tabs, select **Plantronics BT600**.

Support

NEED MORE HELP?

plantronics.com/support

Plantronics, Inc.

345 Encinal Street
Santa Cruz, CA 95060
United States

Plantronics B.V.

Scorpius 171
2132 LR Hoofddorp
Netherlands

© 2018 Plantronics, Inc. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth, SIG, Inc. and any use of such marks by Plantronics, Inc. is under license. All other trademarks are the property of their respective owners.

Patents pending.

-06 (09.18)