
## Westone TRU® Work Filters (NRR 16 dB)



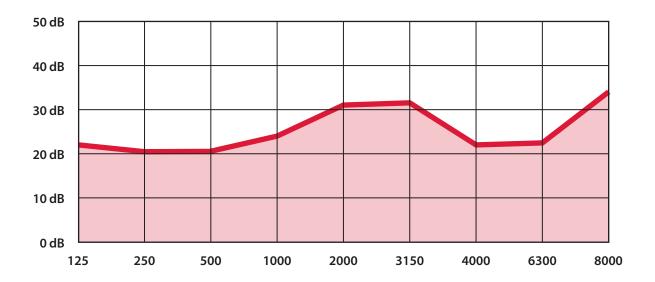

## Universal-Fit Hearing Protection

## Ideal for:

factories, industry, assembly lines, construction, power tools, lawn mowers, and so much more . .

Founded in 1959, Westone has served the audiology community as one of the most trusted manufacturers of both custom-fit and universal-fit hearing protection in the world. Our TRU **Work** universal-fit earplugs use critically-tuned, advanced acoustic filter technology to protect hearing. Whether working in construction, on an assembly line, in a industrial setting, or at home using power tools or mowing the lawn, loud noises can put your hearing at risk. Westone's TRU **Work** hearing protection is on the job.

## Westone TRU Work NRR 16 dB

American National Standards Institute (ANSI) Noise Reduction Rating (NRR) Frequency (F) Mean attenuation (MA) Standard Deviation (SD) Assumed Protection Value (APV)

F (Hz)	125	250	500	1000	2000	3150	4000	6300	8000
	22.1	20.7	20.5	24.3	31.1	31.6	21.8	22.7	33.7
SD (dB)	3.0	2.8	3.6	3.8	4.0	5.1	3.2	3.4	4.1
APV (dB)	16.1	15.1	13.3	16.7	23.1	-	18.4	-	20.7

The tests according to ANSI S3 19-1974 and EN 352-2:2020 and certication to the regulation EU 2016/425 and the production control module D was performed by PZT GnbH Bismarkstrasse 246-B,26389 Wilhelmshaven #1974 Germany. The level of noise entering a person's ear when hearing protection is worn as directed is closely approximated by the difference between the A-weighted enviornmental noise level and the NRR. Example:

- 1. The enviornmental noise level as measured at the ear is 92 dB
- 2. The NRR is 16 decibels (dB)
- 3. The level of noise entering the ear is approximately equal to 85 dB(A)

**Caution:** For level noise environments dominated by frequencies below 500 Hz the C-weighted environmental noise level should be used.